



MCP737EL

	F/D	A/T ARM	N1	SPEED	C/O	LVL CNG	HDG SEL	BANK	VNAV	LNAV	VOR LOC	APP	V/S	CMD A/B	CWS A/B	DISENGAGE BAR	ALT/SPEED INT
P3D (default B737)	✓	✓	✓	✓	✓	✓	✓			✓(1)	✓	✓	✓	✓		✓(2)	
FSX(default B737)	✓	✓	✓	✓	✓	✓	✓	✓		✓(1)	✓	✓	✓	✓		✓(2)	
PMDG777X	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
LevelD 767	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Project Magenta	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
PMDG737NGX	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Flightdecksoftware	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Sim-Avionics	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
X-Plane	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		✓	✓
PRO SIM737	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
iFly737 (FS9 & FSX)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
aeroSystem737	✓	✓	✓	✓	✓	✓	✓		✓	✓	✓	✓	✓	✓		✓	
FsXPand FMS	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
OPUS FSX	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Aerowinx747	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

- (1) With the default FS aircraft the L NAV button engage the GPS mode
- (2) Disconnect AP
- (3) Course1, IAS/MACH, HEADING, ALTITUDE, VERT SPEED and COURSE2 work with all FS default aircraft (if any) and table's add-on software
- (4) FS9 is no longer updated

